










SummaCut RL Firmware Version

Info

This procedure describes the method to query the ROM type (version and revision) of a SummaCut series cutter using the control panel on the cutter.

It is not necessary to load media in the cutter to perform the test.

Procedure

1. Power on the cutter.
2. Press .
'KNIFE PRESSURE' will appear on the LCD.
3. Press .
'SYSTEM SETUP' will appear on the LCD.
4. Press .
'ACTIONS' will appear on the LCD.
5. Use  or  to scroll through the menu until 'CONFIGURATION' is reached.
6. Press .
'LANGUAGE' will appear on the LCD.
7. Use  or  to scroll through the menu until 'FW VERSION' is reached.
8. Press .
The 'Rom Revision' of the cutter will now appear on the LCD.