

Tray One – Adjusting Separator Pad



Depending on thickness and media type, it might be required to adjust the separator pad exposure to allow a more accurate feeding.

Tools


- 5.5mm wrench or socket
- Size 2 allen key

Procedure

Remove the 2 screws on both sides and remove the front cover.

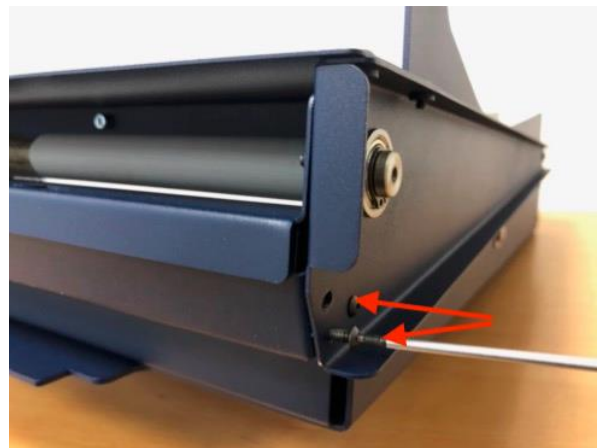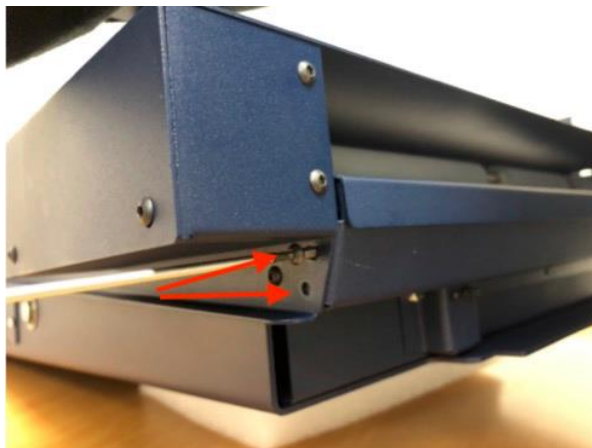

Loosen the 3 nuts. You are now able to adjust the height of the separator.

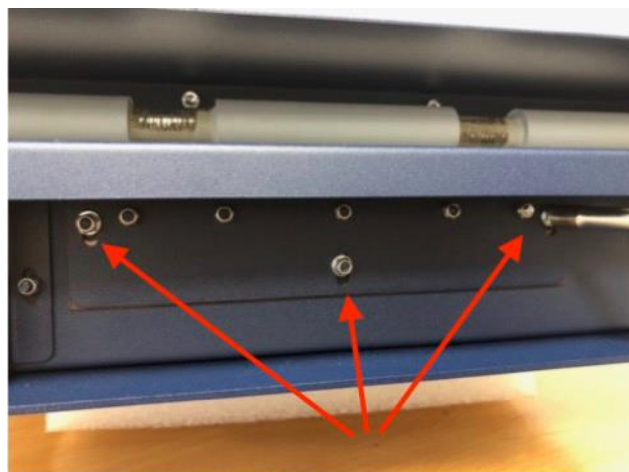

The thinner the media, the higher the separator must be set

The default height of the separator is 1.5mm.

It should be adjusted between the 0.2 and 1.5mm from the zero point

Tighten the three nuts to fix it.



Remount the front cover.