

L1810-2 Back-up and Restore

This manual describes how you can create and restore a back-up.

1 Software

All Summa software downloads can be found at:

<https://www.summa.com/en/support/software-firmware/>

Required software:

- Summa GoCare v1 or higher




2 Preparations

1. The machine must be connected to a computer by USB.
If a vision option has been installed, the internal PC will be connected to the machine by USB.
2. Start the machine.
3. Start Summa GoCare.

3 Back-up and Restore

Below is an example of how to select how you want to create your **back-up**. This is exactly the same for selecting how you want to **restore** your back-up file.

1. Right click on the 'Device – Back-up' (1) action. Alternatively you can select the action on the side and click the 'Edit action set' button.

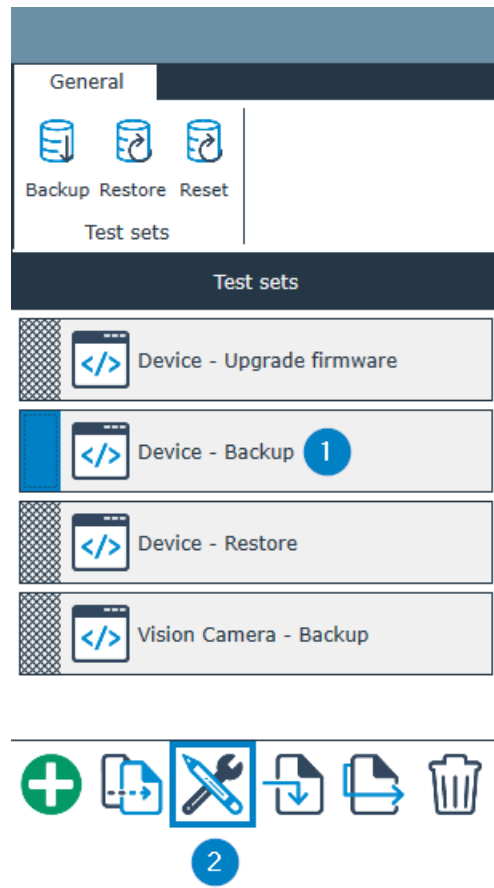


2. Select the 'Back-up' action (1), select how you want to store it (2) and click OK (3).
There are 2 possible ways to create and restore your back-up:

- **Cloud storage (default):** stored on Summa server.
Requires internet connection.
- **Local storage:** stored locally on the computer or external hard drive.

Click on  and select a directory you want to save the back up.

Storage


Directory 

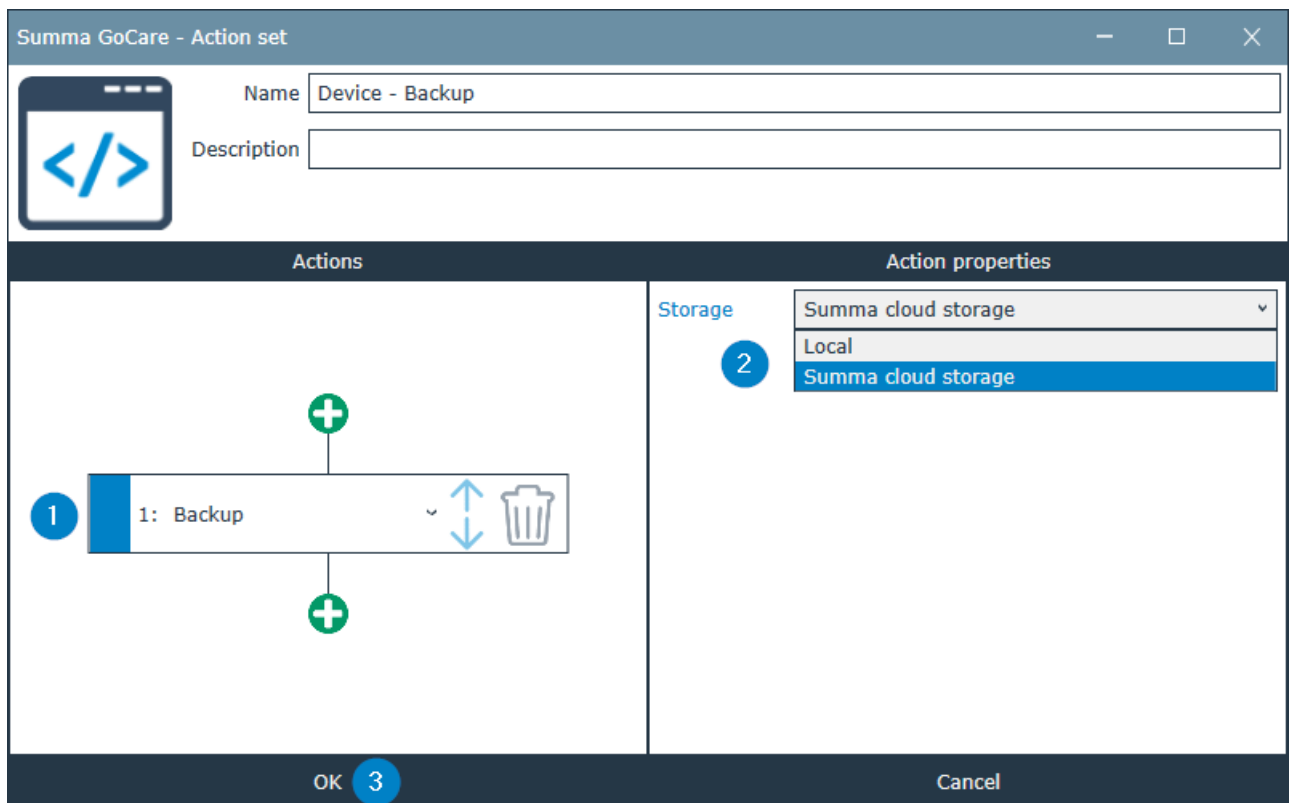



The dialog box 'Summa GoCare - Action set' contains the following elements:

- Name:** Device - Backup
- Description:** (empty field)
- Actions:** A list with one item '1: Backup' (marked with a blue circle 1). It includes a plus icon to add, a minus icon to remove, and a trash icon to delete.
- Action properties:** A section with a 'Storage' dropdown menu (marked with a blue circle 2). The menu is open, showing 'Summa cloud storage' (selected), 'Local', and 'Summa cloud storage'.
- Buttons:** 'OK' (marked with a blue circle 3) and 'Cancel'.

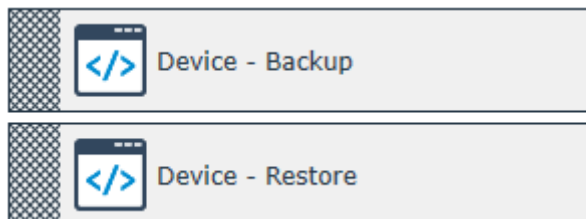3. Click the action you want to perform.



Two buttons are shown, each with a code icon and a label:

-  Device - Backup
-  Device - Restore

Revised December 15, 2022